

Base Cabinets

Product Numbers

- LUCBxxyyG
- LUCSxxyy

Required Tools

- #2 Phillips Screwdriver
- 1/4" Wrench or Socket

Drawer Installation and Removal

Drawers are factory installed prior to shipment. Drawers are usually removed during base cabinet installation, and they must be reinstalled and adjusted to complete the installation. This is accomplished as follows:

1. Remove drawers from the base cabinet.

Removing the drawer body from the slide assembly is easily accomplished, without tools, by deflecting a nylon lever built into the innermost member of the slide (Illustration 1).

- 1.1. Pull the drawer out to its fully extended position and locate the black nylon lever on each side.
- 1.2. Push the black nylon lever up on the left side, and down on the right side, while pulling out gently on the drawer. (For certain styles of slides, the levers will need to be pushed in, rather than pushed up and down.)
- 1.3. Pull the drawer body completely out of the slides, noting that the ball bearings in the slide align and engage within the grooved track. (Important: Take note of how the bearings engage in these grooves to lock the slide members together – see Illustration 2.)

Illustration 1


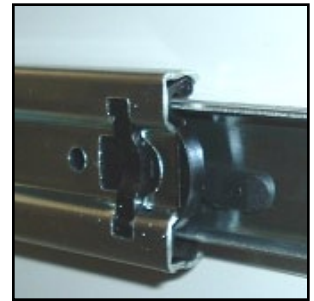


Illustration 2

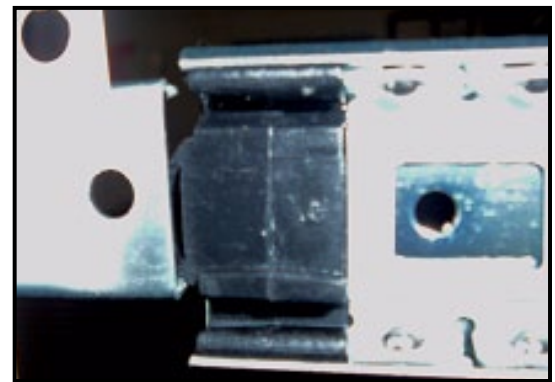

2. Install and level base cabinets, secure work surfaces.

3. Reinstall drawers, checking for proper alignment and fit.

To reinstall, pull the bearings all the way forward on the slides in the cabinet. Align the slides on the drawer within the slides in the cabinet. Push the drawer in with equal pressure on both sides. The black nylon lever on the slide attached to the drawer body will lock the drawer in place (Illustration 2).

4. If necessary, adjust drawers up or down.

You can adjust the drawer up or down if the gap at the top or bottom is uneven. Proper spacing at top and bottom is 0.125".

- 4.1. Loosen the adjustment screws in the lower inside corners of the drawer front (Illustration 3).
- 4.2. Grab the drawer front and slide it up or down.
- 4.3. Tighten the screws and check for fit. Repeat if necessary.

Illustration 3



Base Cabinets

Door and Drawer Adjustment

Ideal spacing of doors:

The spacing around the top, bottom and sides of doors should be 0.125". The space between doors also should be 0.125" (Illustration 4).

Adjusting the door (hinge) up or down:

Oversized hinge holes in the cabinet allow for side to side and limited up and down adjustment (Illustration 5). Each door can be adjusted slightly for spacing purposes by loosening the screws in the hinges and moving the door up or down. Be sure to tighten the screws securely when finished.

Illustration 4


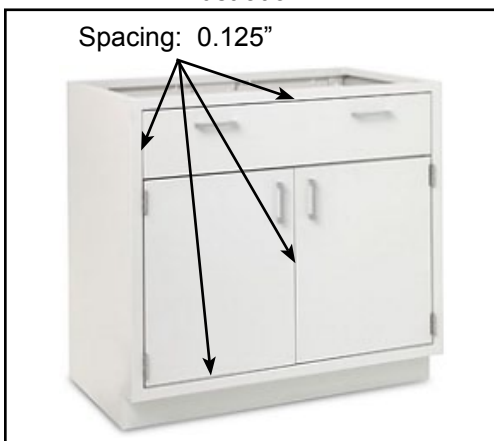


Illustration 5

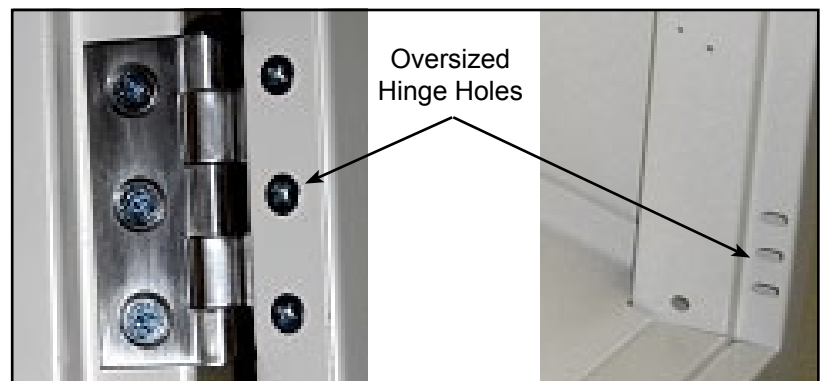

Shelf Installation and Adjustment

Shelves are supported by adjustable shelf clips. Shelves are vertically adjustable in increments of 1.375".

1. Install the shelf clips in all four corners of the cabinet at the desired height (Illustration 6).
2. Tilt the shelf at an angle to place it in the cabinet (Illustration 7), being careful not to scratch the inside of the cabinet.
3. At extreme shelf locations (top or bottom), it may be desirable to install the rear clips first, then rest the back of the shelf on the rear clips while holding up the front of the shelf, and then install the front clips.

Illustration 6



Illustration 7



SYMBIOTE® Technical Furniture

Base Cabinets

Removable Back Access Panel and Bottom Panel

Each base unit is equipped with back and bottom panels for access to wall receptacles and plumbing. These panels are removable.

1. Remove the shelves.
2. Remove the cabinet bottom by lifting up the back edge of the bottom panel, then tilt the bottom and remove it (Illustration 8).
3. Locate the two bent tabs in the upper flange of the cabinet back. These tabs are bent at the factory to prevent the cabinet backs from moving during shipment. To remove the back panel, bend the two tabs to a straight position, allowing the cabinet back to slide upward (Illustration 9).
4. Slide the back panel upward, then push the bottom of the panel forward to remove it from the cabinet (Illustration 10).

Illustration 8

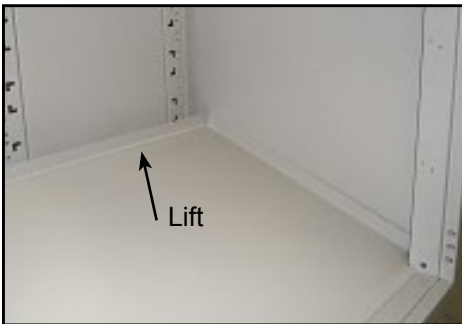


Illustration 9

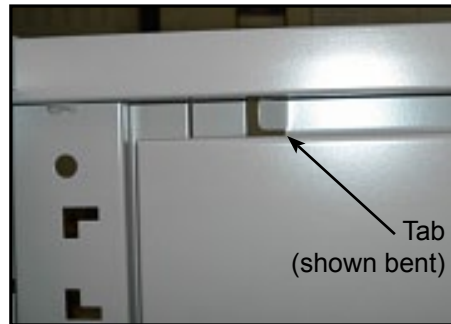


Illustration 10



Leveling

All base cabinets are equipped with “levelers”. While positioning and aligning the cabinets, these levelers may be adjusted to accommodate uneven or sloping floors. A ¼” wrench or socket is required.

There are four levelers in each base cabinet, one in each bottom corner (Illustration 11). Levelers can only be adjusted while the cabinet’s bottom panel is removed.

1. Remove all shelves.
2. To remove the cabinet bottom panel, lift up at the back edge, then tilt and remove (Illustration 8).
3. Use a ¼” wrench to adjust the levelers (See Illustration 11).
4. Replace the cabinet bottom and shelves.

Illustration 11



SYMBIOTE® Technical Furniture