

## Base Cabinets

### Product Numbers


- LUCBxyyG

### Required Tools


- #2 Phillips Screwdriver
- 1/4" Wrench or Socket

**Hardware Pack:** none


**NOTE:** Remove the factory installed drawers prior to installation.

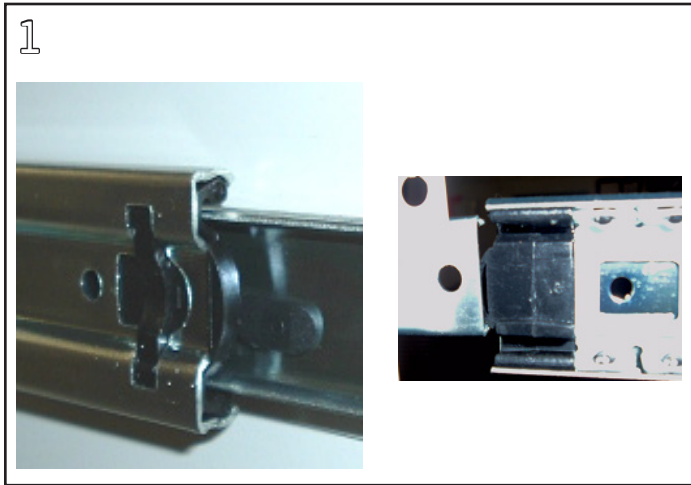

**Remove drawers from the base cabinet:** Locate the black nylon lever on each side. Simultaneously push the left lever and the right lever down while gently pulling the drawer out. (Certain levers may need to be pushed in). Pull the drawer body out of the slides. Note how the ball bearings engage in the grooves to lock the slide members together.

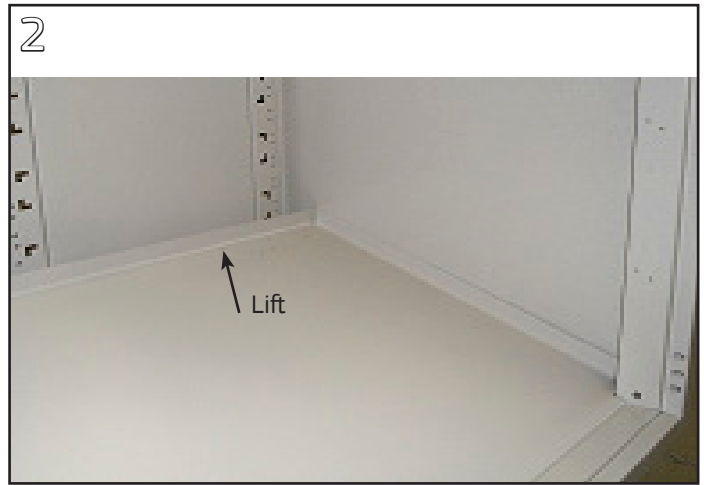

**Install and level base cabinets and secure surfaces.** Remove all shelves. Remove cabinet bottom panel by lifting up at the back edge, then tilt and remove.

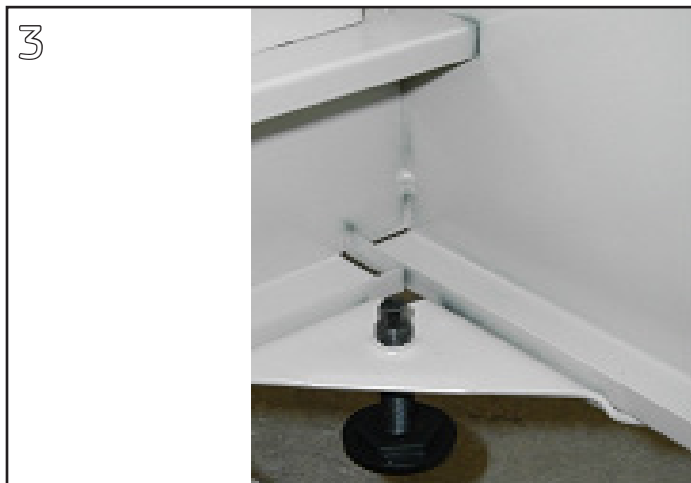

Adjust the four levelers to accommodate uneven or sloped floors with a 1/4" wrench or socket. Replace the cabinet bottom and shelves.




Reinstall the drawers, checking for alignment and fit. Proper spacing at top and bottom is 0.125".

## Base Cabinets




To reinstall drawers, pull the bearings all the way forward on the slides in the cabinet. Align the slides on the drawer within the slides in the cabinet. Push the drawer in with equal pressure on both sides. The black nylon lever on the slide attached to the drawer body will lock the drawer in place. Adjust drawers by loosening the screws in the lower inside corners of the drawer front. Grab draw front and slide it up/down. Tighten screws and check for fit. Repeat if necessary.

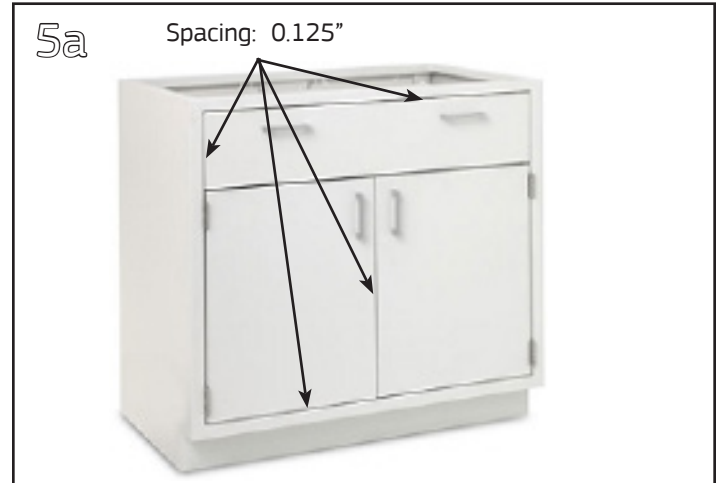

### Door Adjustment:

For ideal spacing of doors the spacing around the top, bottom and sides of doors should be 0.125". The space between doors should also be 0.125".

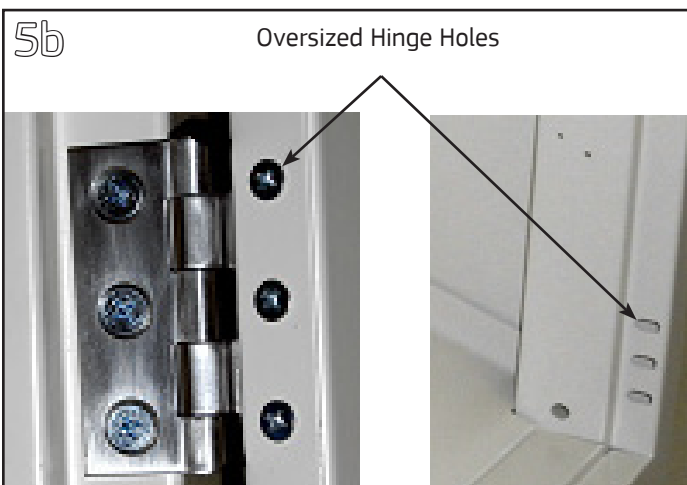

### Adjusting the door (hinge) up or down:

Oversized hinge holes in the cabinet allow for side-to-side and limited up and down adjustment. Adjust the doors slightly by loosening the screws in the hinges and moving the door up or down. Tighten the screws securely when finished.




### Shelf Installation and adjustment:

Install the adjustable shelf clips. Shelves are vertically adjustable in 1.375" increments.

## Base Cabinets




Tilt the shelf at an angle to place it in the cabinet, being careful not to scratch the inside of cabinet. At extreme shelf locations (top/bottom) it may help to install rear clips first, then rest the back of the shelf on the rear clips while holding up the front end of shelf. Then install the front clips.

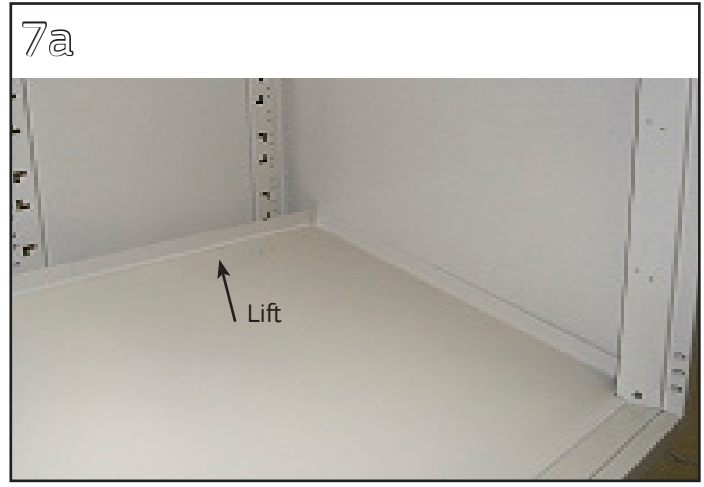

**Removable Back Access Panel and Bottom Panel:** To access wall receptacles and plumbing remove the back and bottom panels by first removing the shelves. Remove the cabinet bottom by lifting up the back edge of the bottom panel, then tilt the bottom and remove it.



Locate the two factory-installed bent tabs in the upper flange of the cabinet back. Bend the tabs to a straight position, allowing the cabinet back to slide upward.

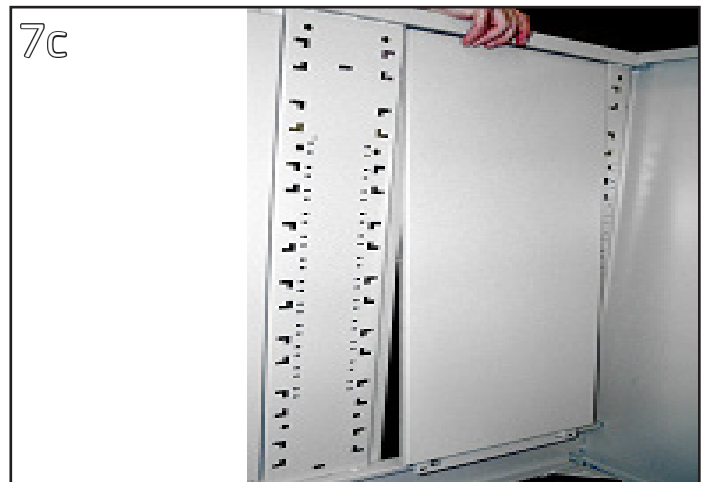

Slide the back panel upward, then push the bottom of the panel forward to remove it from the cabinet.