



 
 
 








## Operation of the DP1

The Desk Panel is used to operate the DESKLINE system. The DP is available in a number of versions: DP1K/DP1U/DP1V/DPF1C/DPF1K for single/parallel drive without memory and DP1U/DPF1M for single/parallel drive with memory (3 memory positions). The two arrow buttons are used for single/parallel drive and the last four buttons for memory drive.


-  Desk up
  -  Desk down
  -  Store memory
  -  User memory
  -  Memory 1
  -  Memory 2
  -  Memory 3
- } Only DP1N

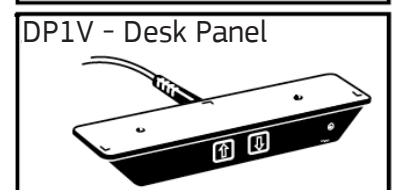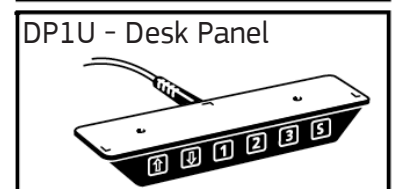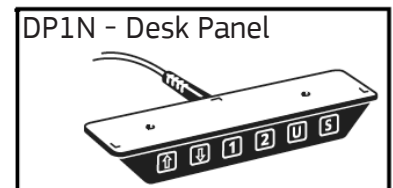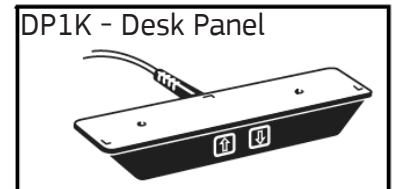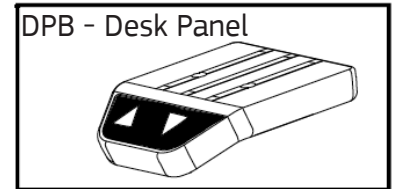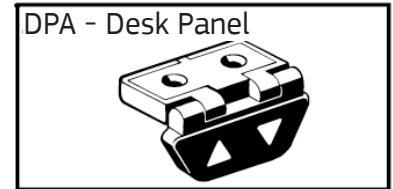

**Single/parallel drive**  

The arrow buttons start the DL4/DB4.

The function is only activated with holding down the button.

Store memory 

Push 

 
Within two seconds, push either , , or 


Choice of user  (only DP1N)

Two persons can store 2 memory positions each.

 
 
Select user 1 or user 2.

Push 

Within two seconds, push either  or 

Store memory 

Push 

Within two seconds push either  or 

Memory drive   





 
 
 
Memory 1, 2, and 3 start a memory drive, the channel(s) drive to a pre-programmed position.



The mounting screws on the DP, DPA, or DPB must be fastened with a max. torque of 1 Nm.

## Fonctionnement du DP1

Le panneau de bureau est utilisé pour opérer le système DESKLINE. Le panneau de bureau (DP) est disponible dans les versions DP1K/DP1U/DP1V/DPF1C/DPF1K pour les lecteurs simples/parallèles sans mémoire et DP1U/DPF1M pour les lecteurs simples/parallèles avec mémoire (3 positions de mémoire). Les deux boutons avec flèches sont utilisés pour les lecteurs simples parallèles et les quatre derniers boutons pour le lecteur de mémoire.


-  Bureau 'vers le haut'
  -  Bureau 'vers le bas'
  -  Mémoire de stockage
  -  Mémoire d'utilisateur
  -  Mémoire 1
  -  Mémoire 2
  -  Mémoire 3
- } Seulement pour DP1N

### Lecteurs simples/parallèles

Les boutons avec flèches mettent en marche le DL4/DB4.

La fonction ne s'active qu'en maintenant le bouton 'vers le bas' appuyé.

### Mémoire de stockage


Appuyez sur 

Dans les deux secondes suivantes, appuyez sur , , ou 

### Choix de l'utilisateur (seulement pour DP1N)


Deux personnes peuvent garder en mémoire deux positions chacune.

Sélectionnez « utilisateur 1 » ou « utilisateur 2 ».

Appuyez sur 

Dans les deux secondes suivantes, appuyez sur  ou 






### Mémoire de stockage

Appuyez sur 

Dans les deux secondes suivantes, appuyez sur  ou 

### Lecteur de mémoire

Les mémoires 1, 2 et 3 activent un lecteur de mémoire, la (les) commande(s) de canal(-aux) d'une position préprogrammée.

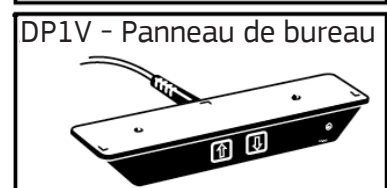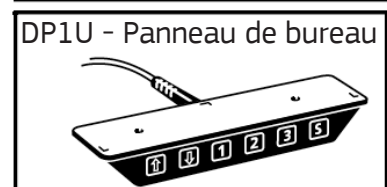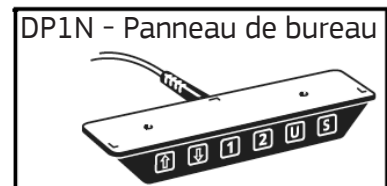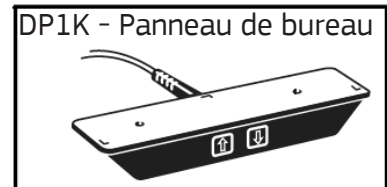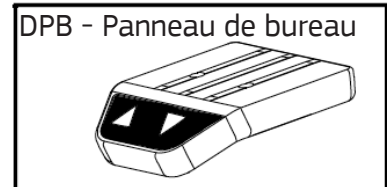

Les vis de fixation sur le DP, DPA ou DPB doivent être attachées avec un couple maximum de 1 Nm.