

## TASK DRAWER MASTER KEY AND CONTROL KEY

The Task Drawer has a removable and installable lock core system for your convenience.

**1.** To remove cylinder core/plug, insert **master key** and turn to unlocked position. Then using the **control key**, remove the core.

**2.** Master key will unlock any plug beginning with the prefix ELS.

**3.** Install new core by following the above steps in reverse order.

*Task Drawer Lock Set with Keys - ELS\*\*\**

Key numbers available (226-325)

*Task Drawer Key Set; control and master - MCK*

