

## Lower Shelf, Tetrad Table


### Product Numbers

- TFLSM15xx


Hardware Pack: N/A

### Required Tools


- 3/16" Allen Wrench

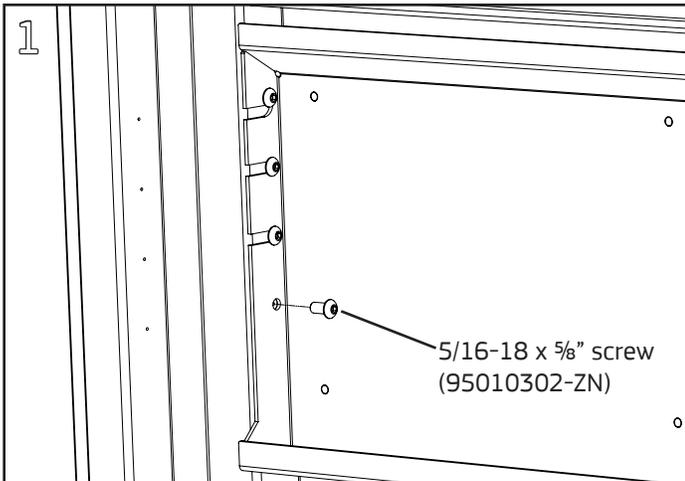

Begin by removing the bottom 5/16-18 x 5/8" socket button head screw from each end of the Modesty Panel. Then loosen the remaining bolts on the panel until you can swing the panel from the top 5/16-18 x 5/8" socket button head screw.

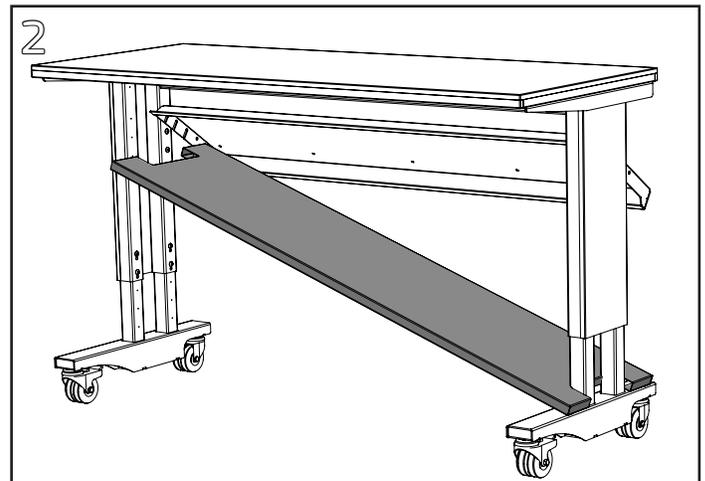

Swing the Modesty Panel up and hold in position. While holding the Panel out of the way, slide one end of the Lower Shelf into position around both legs on one side as shown. Drop the other side down and around both legs.

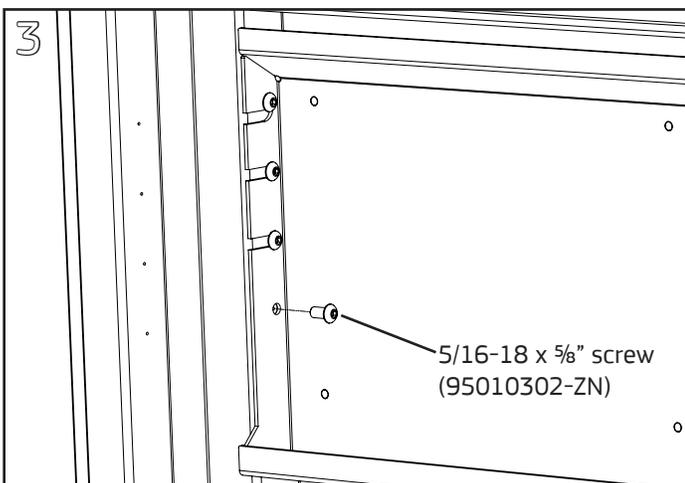

Swing the Modesty Panel down and back into position. Then replace the bottom 5/16-18 x 5/8" socket button head screw from each end of the Modesty Panel. Tighten each 5/16-18 x 5/8" socket button head screw thoroughly.