
Magnetic White Board, Panel Mount

Product Numbers

MBS24xx

Hardware Pack: MBSHP** (p/n 15011701-01-**)


MBTHP** (p/n 15011702-01-**)

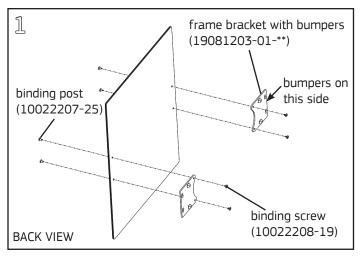


Attach brackets to holes in white board using (2) binder posts and #8-32x¾6" binder screws per bracket using a #2 Phillips screwdriver and a ¼" flat-blade screwdriver. Note: polyurethane mounting bumpers should face away from white board.

Required Tools


- #2 Phillips Screwdriver
- ¼" Flat-Blade Screwdriver
- Tape Measure

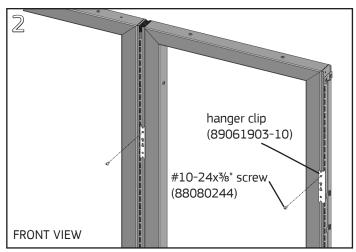

Insert a hanger clip on each side of the UltraFrame at the same heights. Install one #10-24x¾" Phillips pan head screw into the top hold of each hanger clip using a #2 Phillips screwdriver, leaving leaving a ⅓" gap between head of screw and clip face.

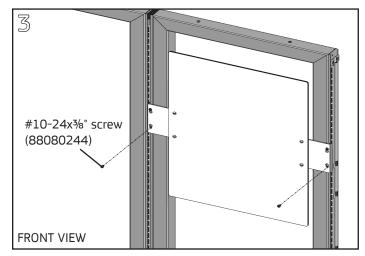

Align screw heads in hanger clips with round center hole in each bracket and slide board down so top of keyslots rest on top screws. Install one #10-24x3/8" Phillips pan head screw into bottom hole on each hanger clip. Tighten all screws.

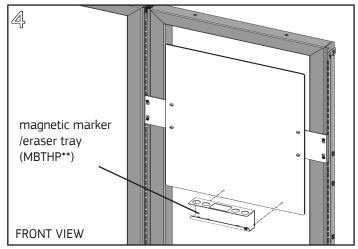

Add magnetic marker/ eraser holder to white board surface, as desired.

SYMBIOTE SYMBIOTE.COM

p/n 08041201-01 rev A sheet 1 of 1