

## WorkTops


### Product Numbers

- WLR, WLT
- WDR, WDT


### Required Tools

- #2 Phillips Bit with Driver or Screwdriver
- Tape measure


**Hardware Pack:** ESTBHP (p/n 93082503)

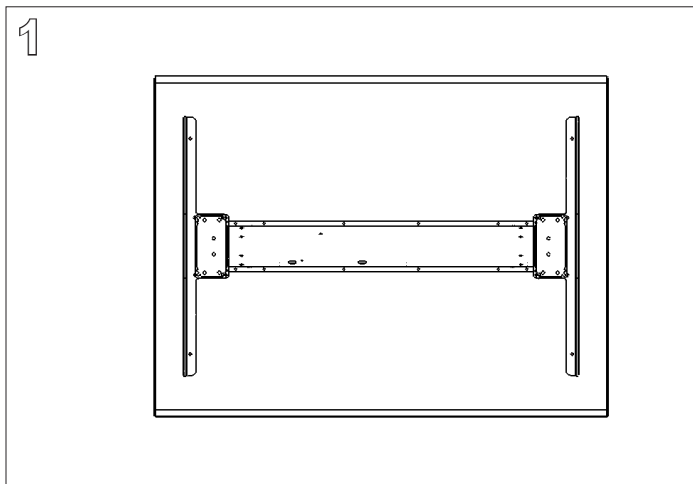

With the WorkTop on the floor upside down if possible, center the WorkTable horizontally and vertically over the surface. The dotted circles indicate the holes to be aligned in the bracket and the surface for installing fasteners.

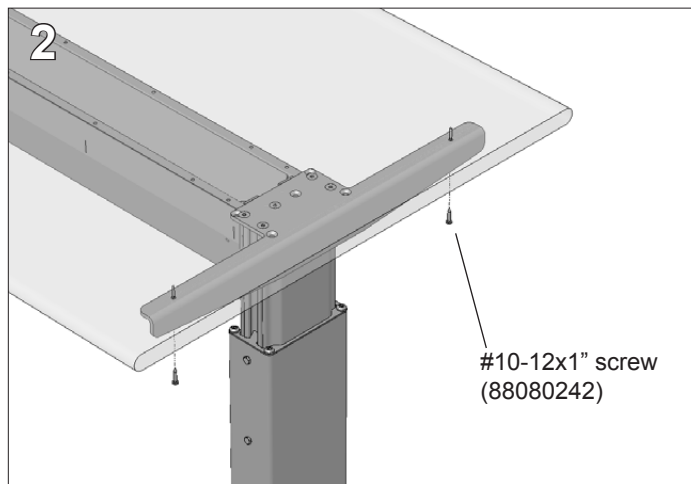

Insert (2) #10-12x1" Panhead screws into the bracket holes and tighten with **#2 Phillips Bit** or screwdriver. Repeat on opposite bracket.

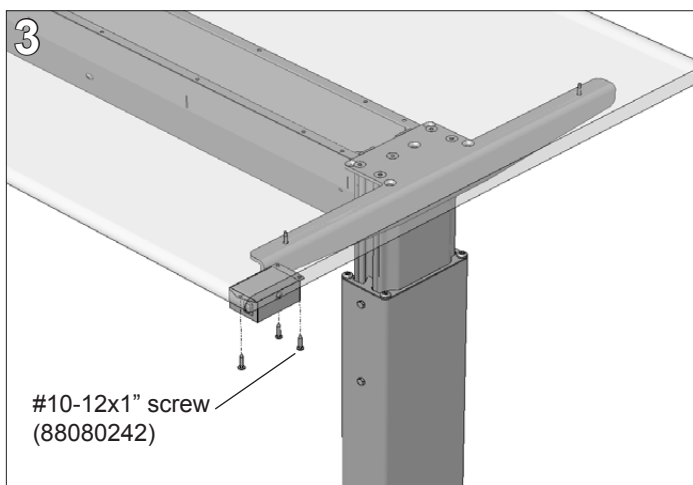

**ELECTRIC BASES ONLY** - WorkTops do not have predrilled holes for the control box. Position control box at the desired location on the underside of the WorkTop and fasten with (3) #10-12x1" Panhead screws.

**SYMBIOTE**<sup>®</sup> Technical Furniture

www.symbiote.com 300 N. Centennial Street Zeeland, MI 49464 phone 616.772.1790 fax 616.772.1797