
# ErgoStat® Pro

### **SHELVING**

## **Bookend Shelf**

# #10-24 nut (93100602)

1. Shelf can be oriented with lip forward or back. Align threaded studs in shelf brackets with holes in shelf. Fasten with (2) #10-24 nylon-insert lock nuts per side using a %" nutdriver or socket wrench. Do not exceed a nut tightening torque of 24 in-lbs.

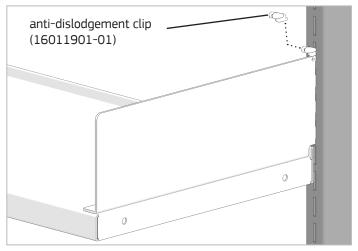

3. Insert tip of anti-dislodgement clip into slot above top hook of shelf bracket as shown.

### **PRODUCT NUMBERS**


PBES11xx, PBES15xx

#### HARDWARE PACK


PBESHP (p/n 16052720-01)

### **REQUIRED TOOLS**

3/8" Nutdriver or Socket Wrench

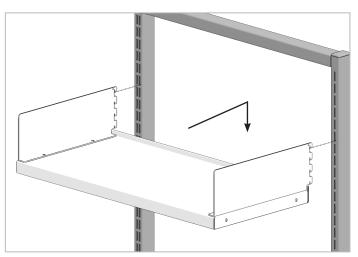

2. Insert bracket hooks into slots in ErgoStat Pro Riser Frame. Push shelf down to ensure it is firmly seated.

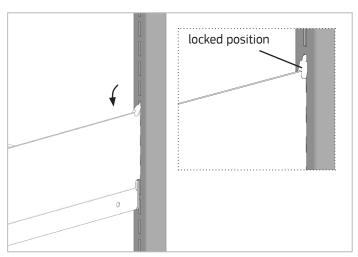

4. Rotate anti-dislodgement clip down until bottom of the clip snaps into the hole near the top hook of the shelf bracket. Repeat on opposite side.