

# ErgoStat® Pro

## STORAGE / ACCESSORIES

### Riser Panel / White Board

#### PRODUCT NUMBERS


PRPM29xx and PRPW29xx

#### HARDWARE PACK


none

#### REQUIRED TOOLS


none

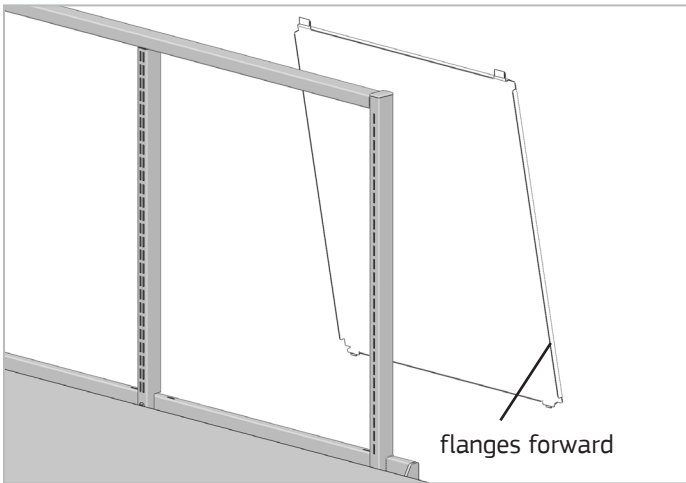


1. If installing panel/board with flanges forward, install board from rear of riser frame. If installing the panel/board with flanges toward back of station, install board from front of riser frame.

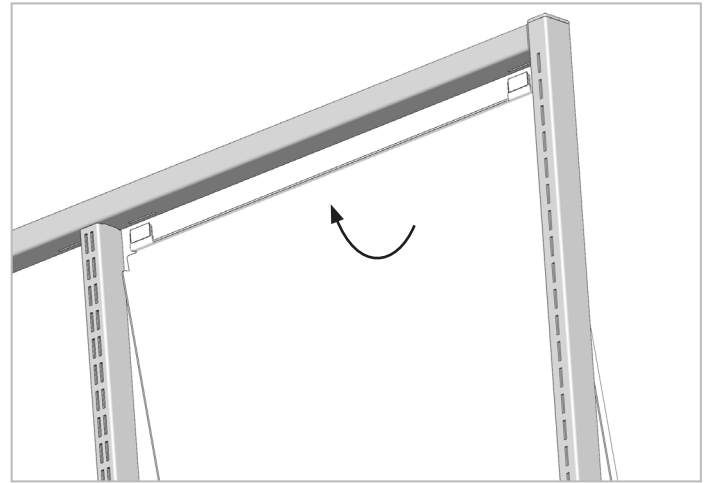

2. While holding panel/board at an angle, align the top tabs of the board with the slots on the underside of the top tube of the riser frame.

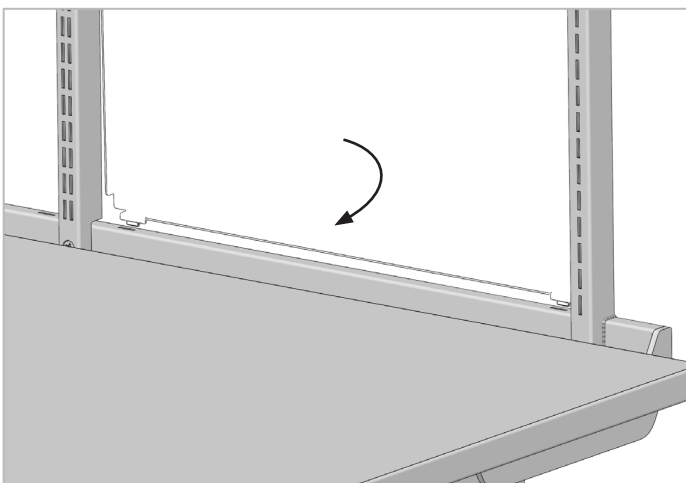

3. Rotate the bottom of the panel/board towards the bottom of riser frame, aligning the bottom tabs of the panel/board with the slots in the bottom tube of the riser frame.

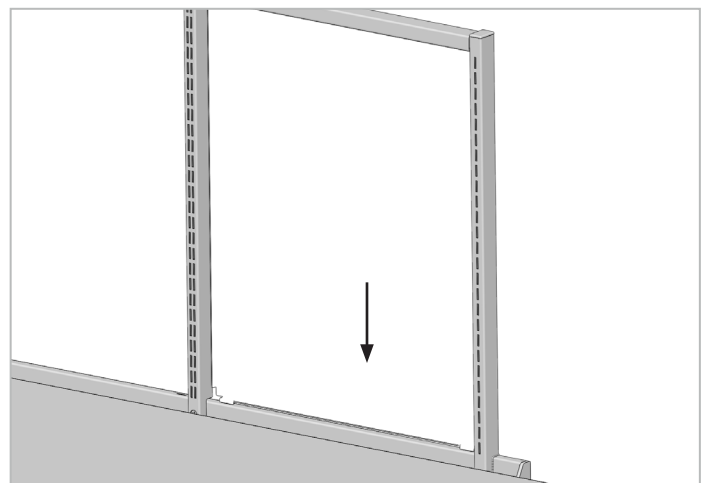

4. Allow the panel/board to drop into place, resting on the bottom tube of the riser frame.