
Installation Instructions

Tote Rail

Product Numbers

TRxx


Hardware Pack: HCP4 (p/n 88081504)

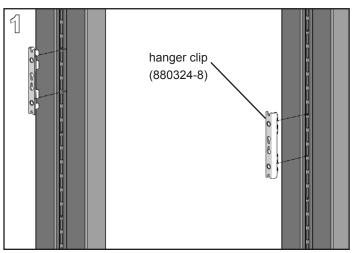

At designated mounting height, install hanger clips on left and right sides of the frame. Ensure the clips are at the same height and firmly seated in the hanger frame slots.

Required Tools

#4 Phillips Screwdriver

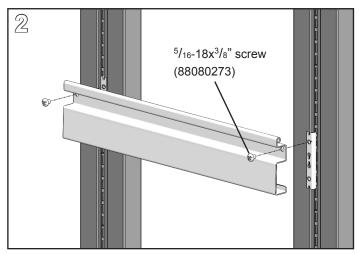

Align top hole in Tote Rail with the top threaded hole in the hanger clip. Fasten rail to clips with one 5/16-18x3/8" Phillips pan head screw per side using a #4 Phillips screwdriver.

phone 616.772.1790

300 N. Centennial Street

Zeeland, MI 49464

www.symbiote.com

fax 616.772.1797