

## WORK SURFACE CANTILEVER SUPPORT

The Ultra Surface's load capacity is 500 pounds evenly distributed. For ease of installation, attach all surface hung components, i.e., Task Drawers, to top before installing the surface.

Use 24" supports for 24", 30", 48", 60" and 72" wide surfaces. Use an 18" cantilever at the panel joint to support the center of the 72" surface.

1. Engage right-hand Cantilever Support in right side of panel frame at designated height. Push support down to securely seat in frame. Repeat procedure with left-hand support in left side of frame. Install 18" cantilever for center of surface if required. (Figure 1)
2. Install pin and button as shown in Figure #3
3. Place button at back of surface into large end of teardrop slot in support. Slide top back to engage. Drop pin into front holes of cantilever. (Figure 1)
4. To level surface, adjust the phillips screws located at the front of cantilever. Install #10-12 x 1" screws provided into underside of supports and surface to anchor top. (Figure 2)

**Note:** The pins and buttons install with a #10-12 x 1-1/4" screw (88080239).

**Work Surface Support Hardware Pack - WSPHP (#88082502)**

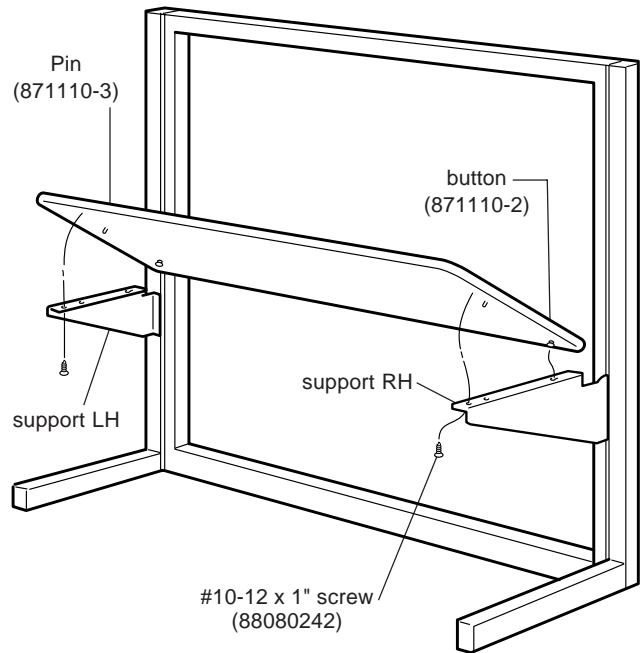


Figure 1

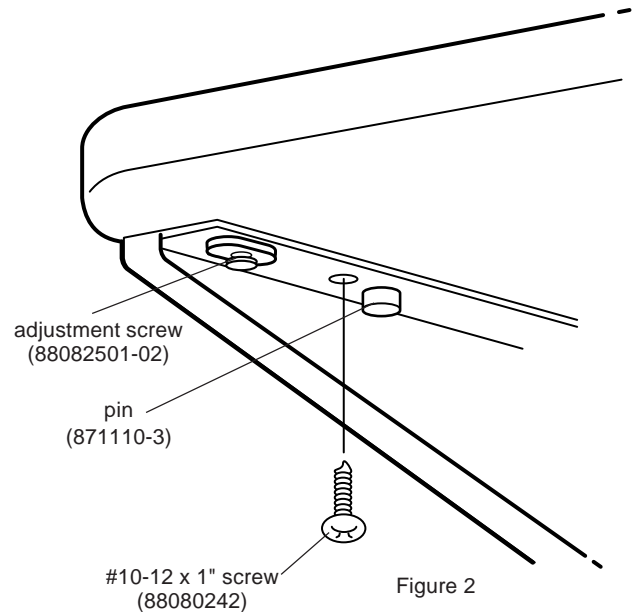


Figure 2

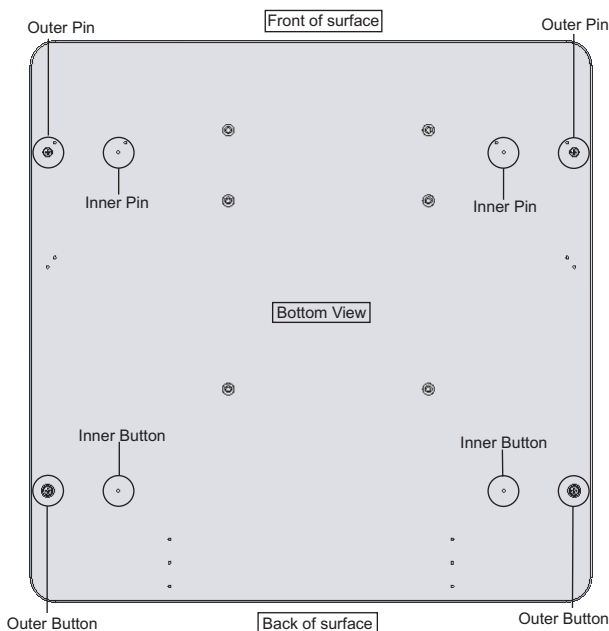


Figure 3