

UTILITY DISTRIBUTOR FOUR-WAY FILLER

Attach the Four-way Filler **after** the Utility Distributors base have been installed on the frames and **before** the Power Jumper Cables, air lines and voice/data wiring has been done.

1. Loosen top screws on Utility Distributor bases and remove bottom screw.
2. Position Four-way Filler back between Utility Distributor, aligning holes. Fit bottom holes of back Filler over screws in UDs. Install screws into bottom holes and securely tighten all four screws. (Figure 1).

At this point install Power Jumper Cables, air lines and voice/data wiring.

3. Position Four-way Filler front over the installed Four-way Filler back, aligning tabs on rear of front filler between the channels on the back filler. Push-in gently to secure. (Figure 2)
4. Continue installation of Utility Distribution Covers per their instructions.

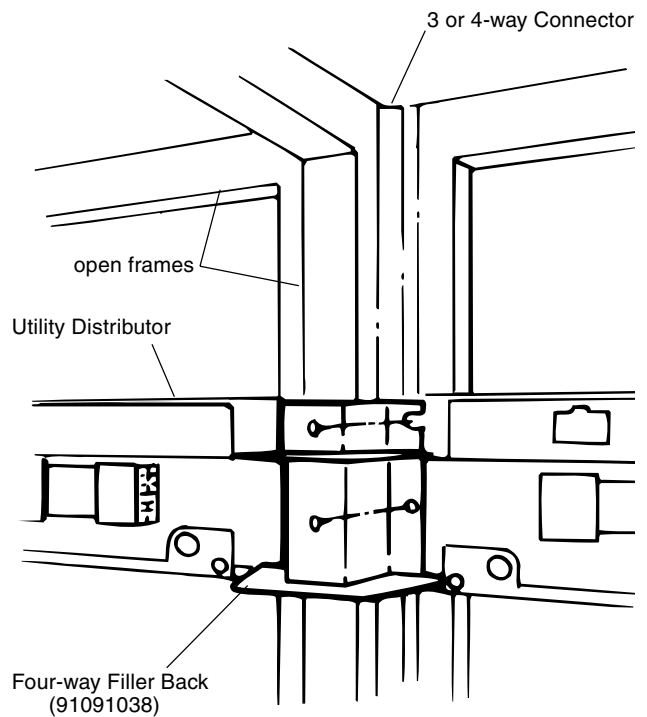


Figure 1

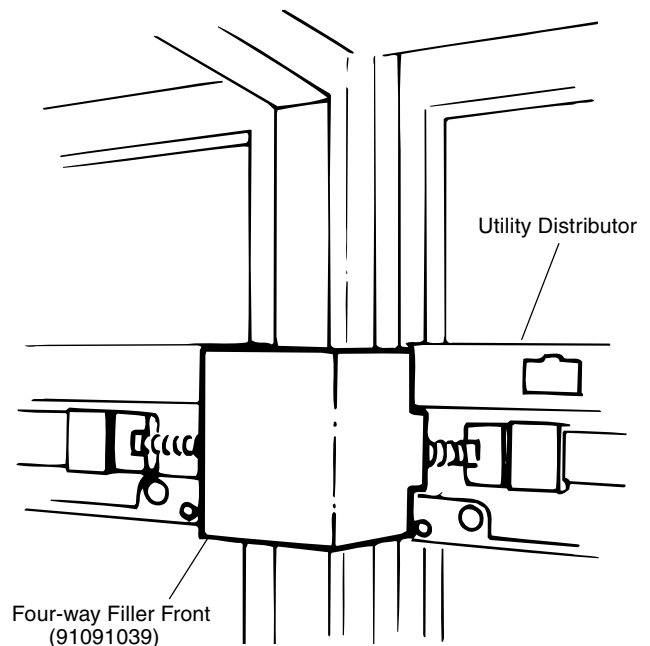


Figure 2