

## AIR STRIP WITH QD FITTINGS

Quick Disconnect fittings comes factory installed on the Air Strip. Additional 1/2" tube (CATK) is needed to connect in-line Air Strips. An Entry/End Kit (CAEK) is required to connect Air Strips to shop air and terminate the run.

**Note:** Use the Tube Cutter to cut the 1/2" tube to assure a proper fit.

1. Install phillips screws into each hanger clip at opposite ends, leaving 3/16" gap between screw and clip.
2. At designated mounting height, install hanger clip on left and right-hand side of frame with screws at the top. Make sure clips are firmly seated in hanger frame.
3. Align large end of keyhole slots with screws. Slide strip down over screws to engage. Install two screws in lower holes and securely tighten all screws. (Figure 1)

### To Connect in-line Air Strips

4. Using the Tube Cutter, cut 1/2" tube to the distance between adjacent bulkhead fittings plus 1". Push tube into bulkhead fittings. Repeat until Air Strips in a multiple run are connected. (Figure 2)

### To Start and Terminate with Entry/End Kit

5. Insert Termination Plug into last bulkhead fitting in the run.
6. Insert 1/2" tube provided into bulkhead fitting at opposite end of run. Using the Tube Cutter, cut to appropriate length if required. Install NPT adapter on tube end and connect NPT adapter to shop air source. (Figure 2)

### 3-1/4" Hanger Clip Hardware Pack - HCP3

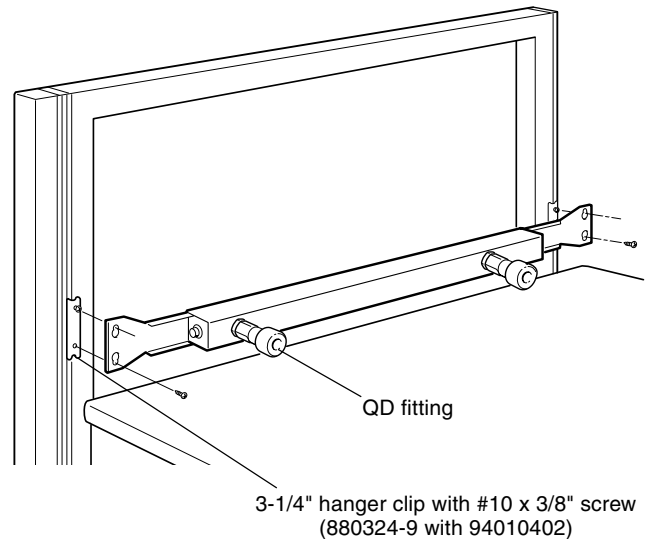


Figure 1

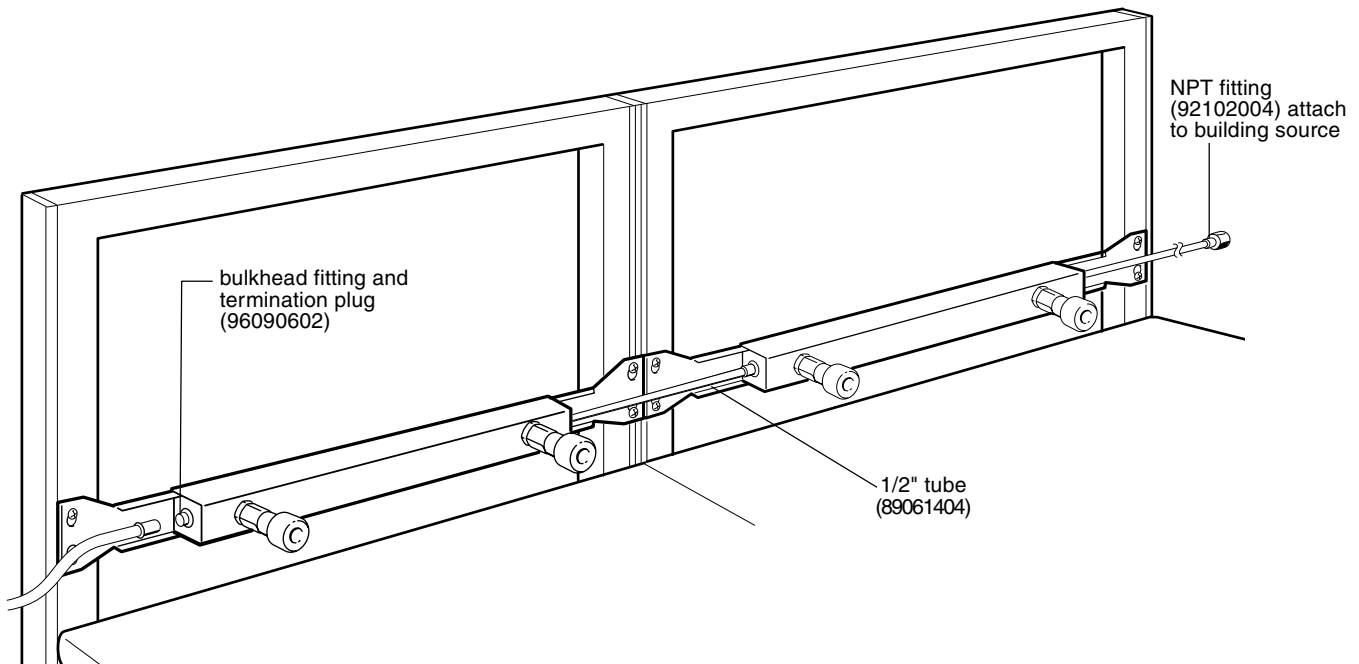


Figure 2