

## PANEL END COVER

Use this component to trim the exposed hardware on the vertical end of an Open or Panel Frame.

1. Place draw block of the End Cover over the top wedge block of the open frame.
2. Loosen allen screw at top of End Cover until bottom draw block clears bottom wedge block of the open frame.
3. Tighten allen screw until End Cover is fastened firmly to the open frame. (Figure 1)

**Note:** An over tighten top allen screw may cause Panel End Cover to bow.

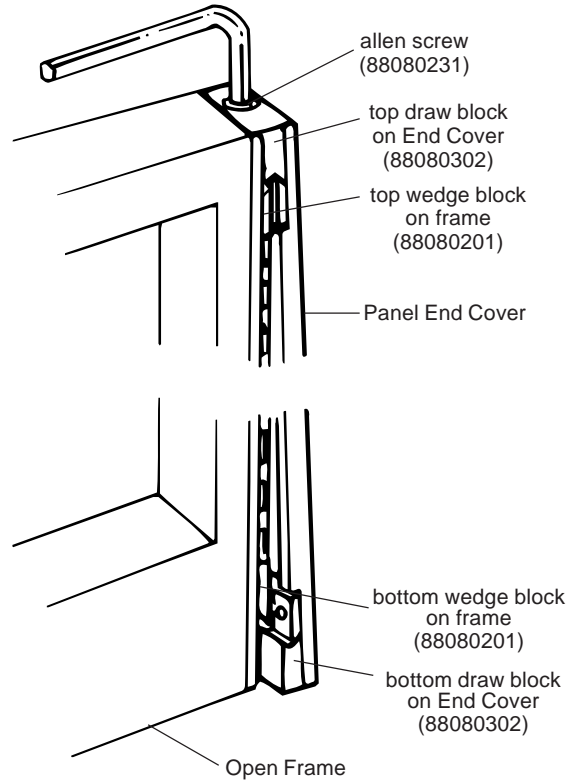


Figure 1

## MID END COVER

Use this component to trim the exposed hardware on the vertical end of a Mid B Frame or Connector Post when used in an end-of-run condition. These instructions also apply to L and T Frames.

1. Loosen allen screw in top draw block of the Mid B Frame or Connector Post.
2. Place bottom wedge block of the Mid End Cover into bottom draw block of the mid frame.
3. Position top wedge block of Mid End Cover under top draw block of the mid frame and tighten allen screw to 6-14 foot pounds. (Figure 2)

**Note:** An over tighten top wedge block may cause Mid End Cover to bow.

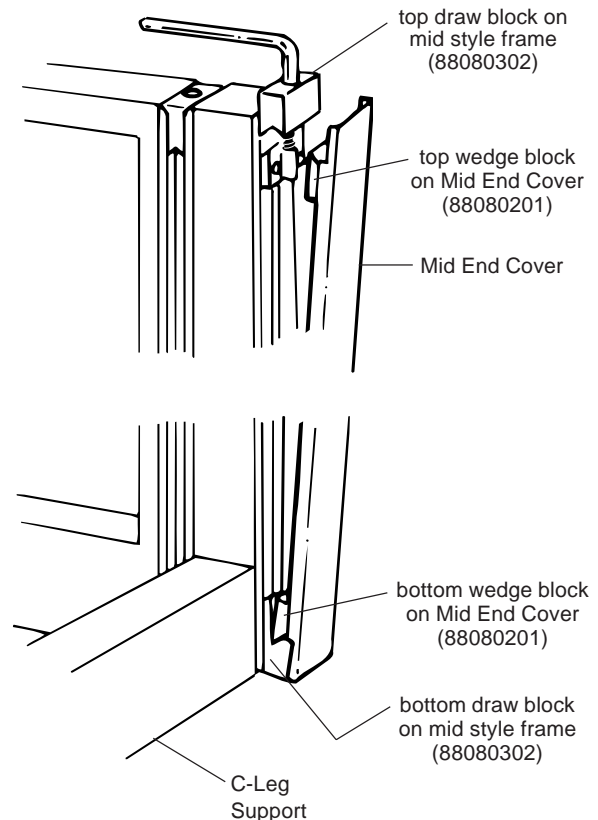


Figure 2