

## Surface Backstop


### Product Numbers

- BSXX

### Required Tools

- #2 Phillips Screwdriver

**Hardware Pack:** SFAHP (96011201)

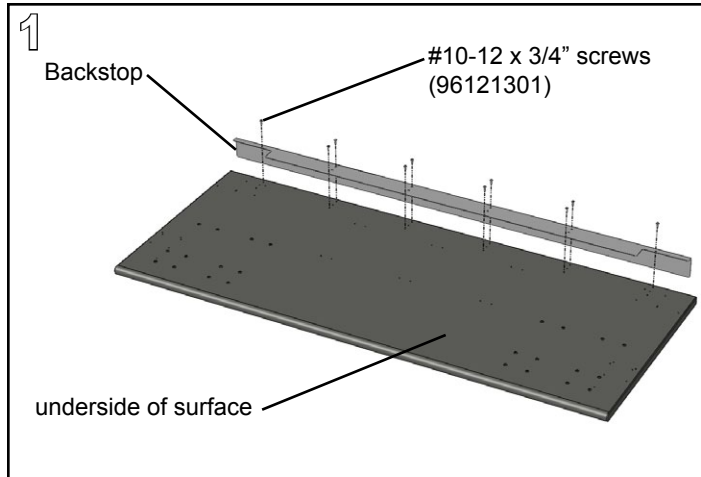

On underside back edge of surface, align the backstop with pre-drilled holes in surface as shown in the above image. Attach with #10-12 x  $\frac{3}{4}$ " screws provided. Tighten all screws securely with a **#2 Phillips screwdriver**.