

Surface Backstop


Product Numbers

- BSXX

Required Tools

- #2 Phillips Screwdriver

Hardware Pack: SFAHP (96011201)

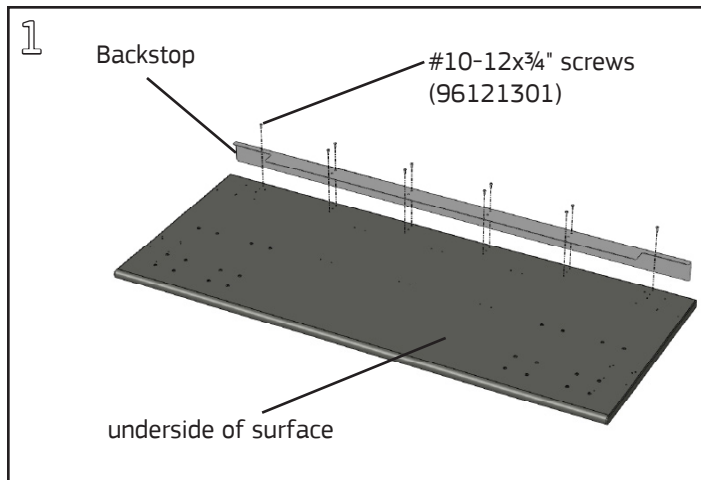

On underside back edge of surface, align the backstop with pre-drilled holes in surface as shown in the above image. Attach with #10-12x $\frac{3}{4}$ " screws provided. Tighten all screws securely with a **#2 Phillips screwdriver**.