

CHANGE OF HEIGHT FRAME TO FRAME CONNECTION

A Change of Height Panel Connector is required to connect two frames of different heights in a straight line.

1. Place change of height block of connector on the top wedge block of the shorter frame. (Figure 1)
2. Loosen allen screw in connector so that the bottom draw block clears the bottom wedge block of the frame.
3. Attach the taller frame by lifting the end and resting its bottom wedge block on top of the connector's bottom draw block.
4. Lift the change of height block slightly off of the top wedge block of the shorter frame and insert the hooks into the slots in the hanger frame of the taller frame. Tighten allen screw 6-14 foot pounds. (Figure 2)

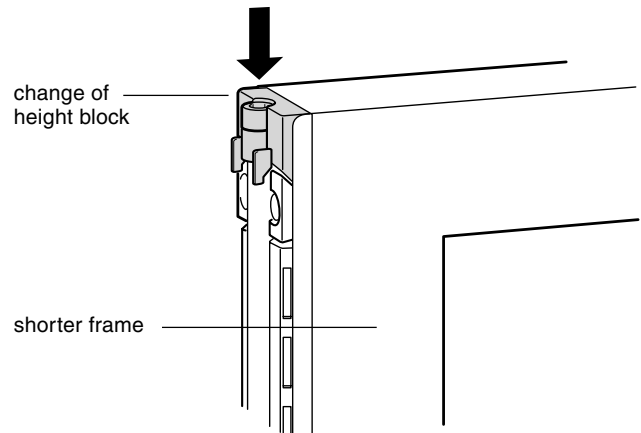


Figure 1

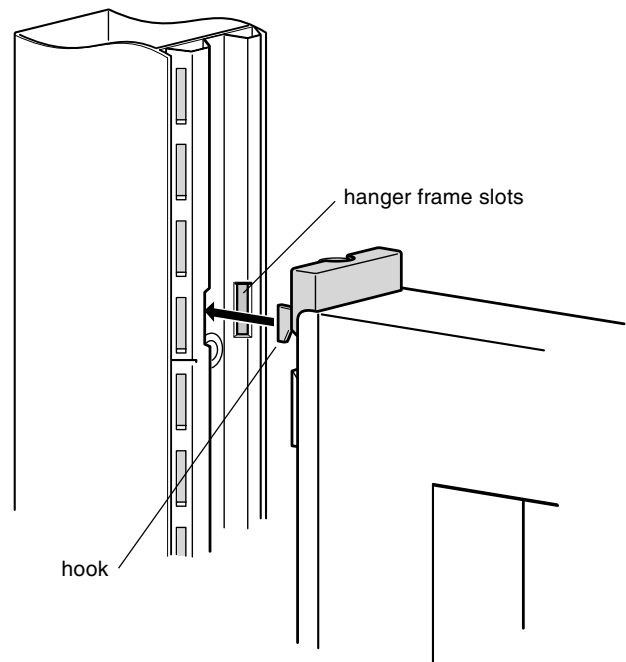


Figure 2