

RACK ENCLOSURE SIDE PANELS, 19" EIA

40-unit Side Panels

The 40-unit module has 3 panels per side, two are 14" (355) high and one is 21" (533) high. The 14" (355) panels are installed next to the top and bottom wrappers. The 21" (533) panel is installed between the 14" (355) panels.

20-unit Side Panels - shown

The 20-unit module has 1 panel per side, 14" (355) high. It is installed between the top and bottom wrappers. (Figure 1)

Installing a Side panel

1. Position a side panel outside of installed Rack Module with the holes at the rear. Align studs in panel with the thru holes on the rack rail angle. Fasten to rack rail with four (4) 1/4"-20 nylock nut per panel. Tighten all nuts securely. (Figure 1)
2. Follow step 1 for all other side panels.

Rack Enclosure Side Hardware Pk - RMPSP (#98010523-01)

RACK ENCLOSURE FRONT PANELS, 19" EIA

1. At desired location, align holes in front panel with threaded holes at front of rack rail. Fasten to rail with four (4) #10-32 x 5/8" phillips screws and 1/4" ID x 1/2" OD washers (optional) per panel from the hardware packs noted above. (Figure 2)
2. Front panels are aluminum and can be easily machined for customization.

Note: #10-32 x 5/8" phillips screws (RMSHP) and 1/4" ID x 5/8" OD washers (RMWHP) are not provided with the Front Enclosure Panels, they must be ordered separately.

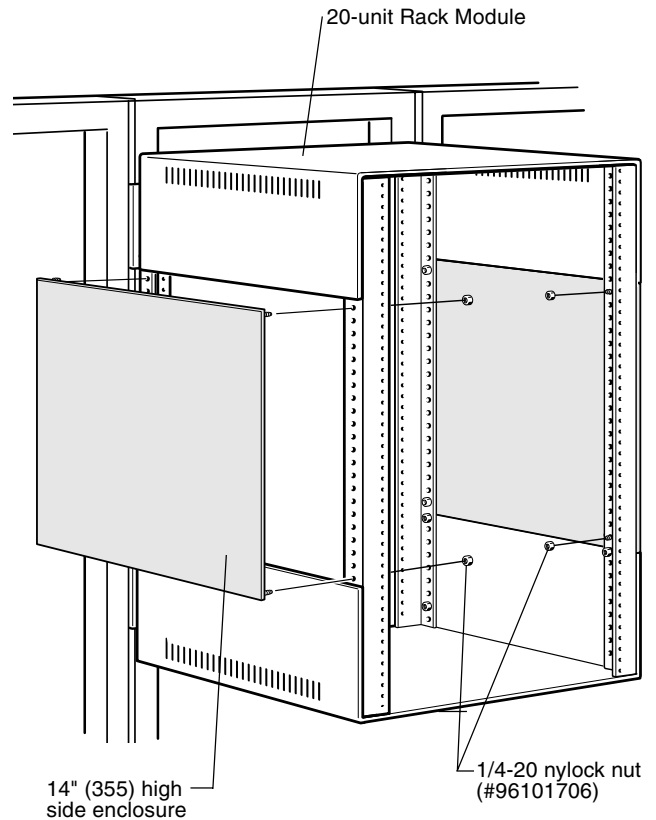


Figure 1

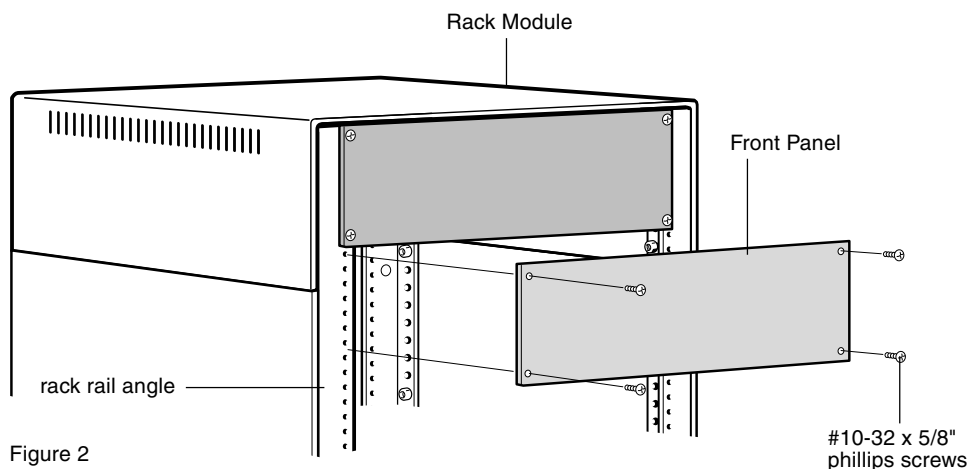


Figure 2