

Pencil Drawer


Product Numbers

- PD2015


Hardware Pack: included in box

Required Tools


- 1/8" Drill Bit
- #2 Phillips Bit and/or Screwdriver
- Cordless Drill/Driver

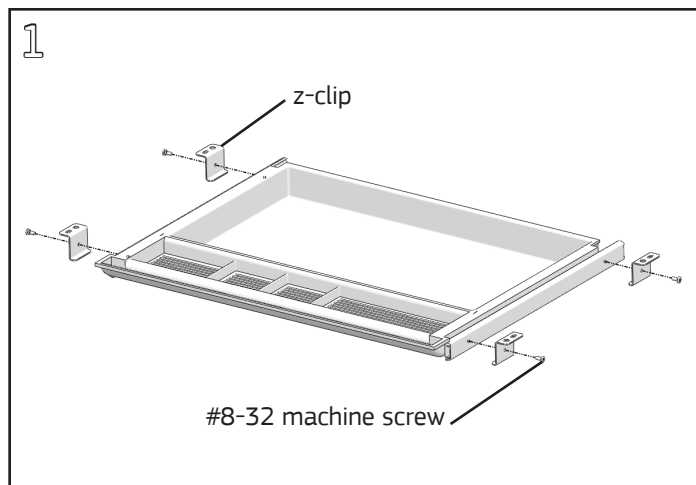

Attach the z-clips to the drawer slides with the small flange inboard in four locations with a #8-32 machine screw using a **#2 Phillips screwdriver**.

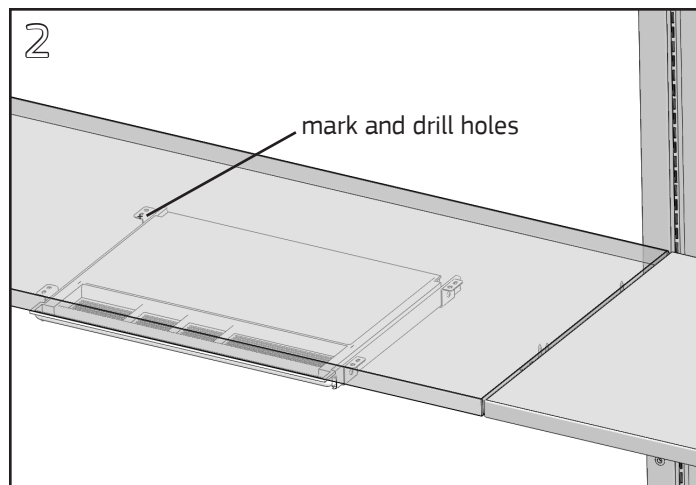

Hold closed pencil drawer in desired location on the underside of the surface. Mark the location of the slot in the top of each z-clip. Drill 1/4" deep pilot holes at these locations using a **1/8" drill bit and cordless driver**.

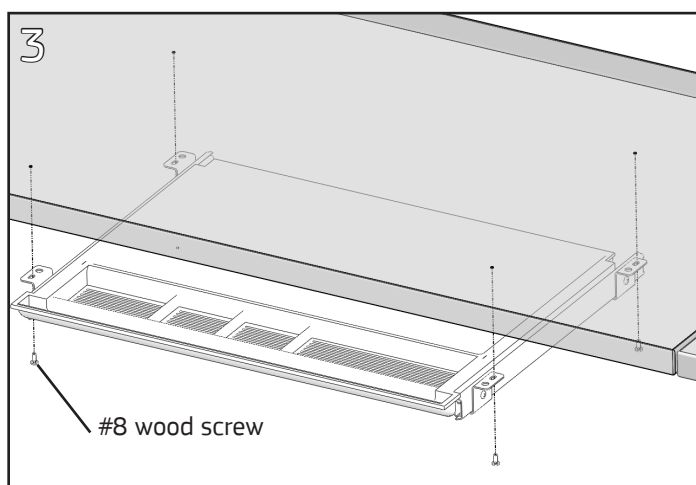

Fasten the pencil drawer to the surface with (4) #8 wood screws using a **#2 Phillips screwdriver/drill with bit**.