

### Floor Case Front Filler


**Product Numbers**

- LUFF84Wxx


**Hardware Pack:** LUFBHP (p/n 09051335-01)

**Required Tools**


- 1/4" Drive Magnetic Socket with adapter
- Cordless Drill/Driver

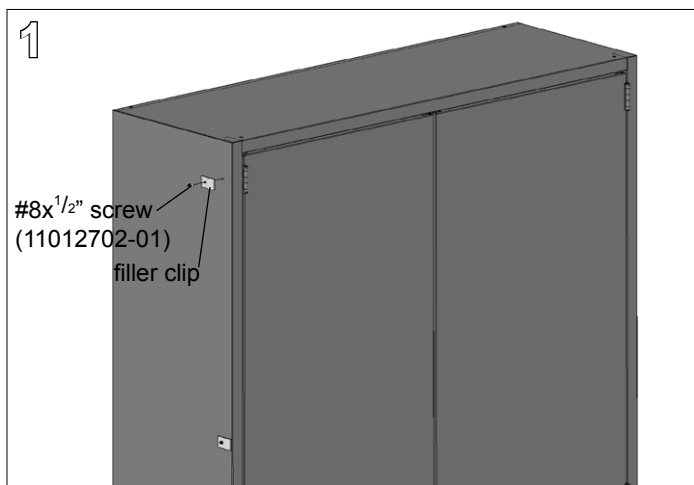


Using a **cordless drill with magnetic socket driver** and #8x1/2" hex washer head screws, install four filler clips vertically on the wall side face of the case with a setback of approximately 1-3/4". The floor case is not predrilled for the clips.

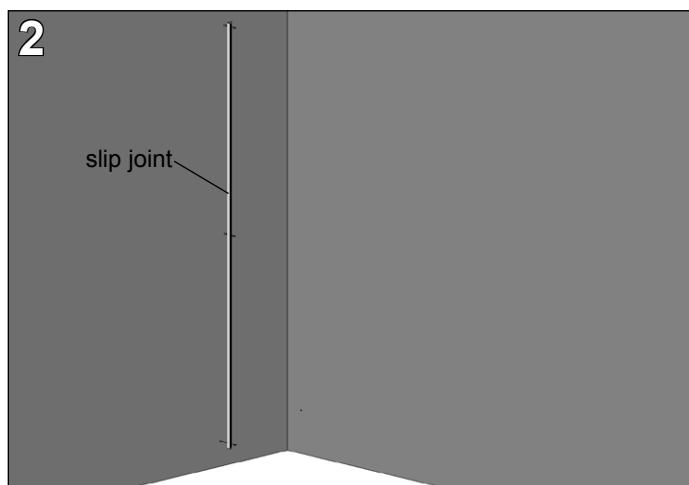

Fasten the slip joint to the wall as required. Attachment hardware for the slip joint is not included with the filler kit. Clearance holes in the slip joint are 1/4" diameter.

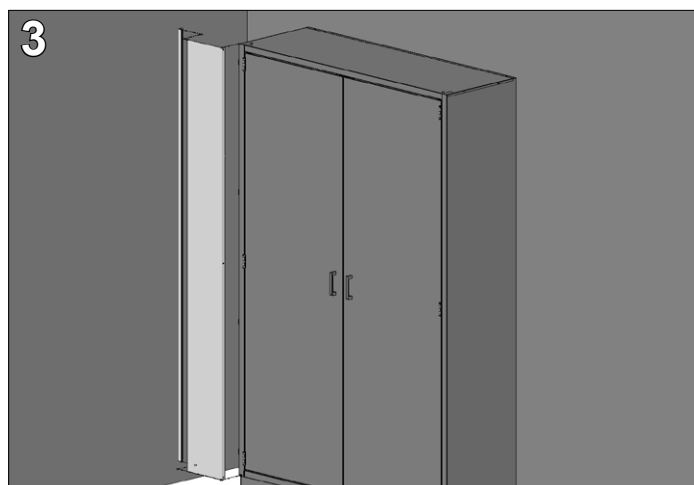

Slide the long flange of the filler into the slip joint and the short flange of the filler into the filler clips on the floor case. The filler is held in place with a friction fit only, no additional fasteners are needed.

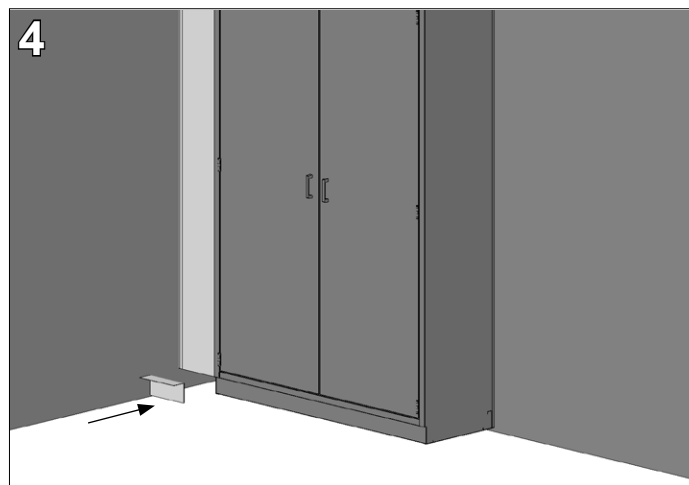

If desired, the top flange of the toe space filler can be cut down to align with the floor case base. The toes space filler is not provided with a means of attachment. It is suggested that the filler be placed in the space between the case and wall, and adhered using either epoxy glue, pop rivets, or other fastening method.