

Tackboard, Single-sided


Product Numbers

- TBS15xx


Hardware Pack: TBSHP (p/n 95012001)

Required Tools


- #2 Phillips Screwdriver

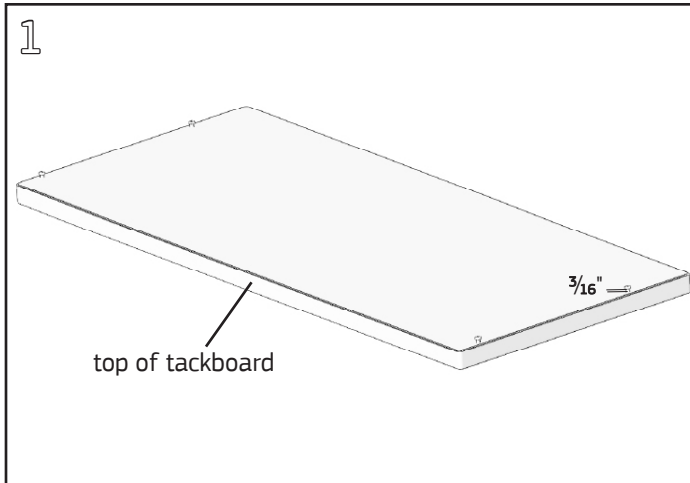

If necessary, loosen the screws in the back of the tackboard so there is a $\frac{3}{16}$ " gap between the board and screw head using a #2 Phillips screwdriver.

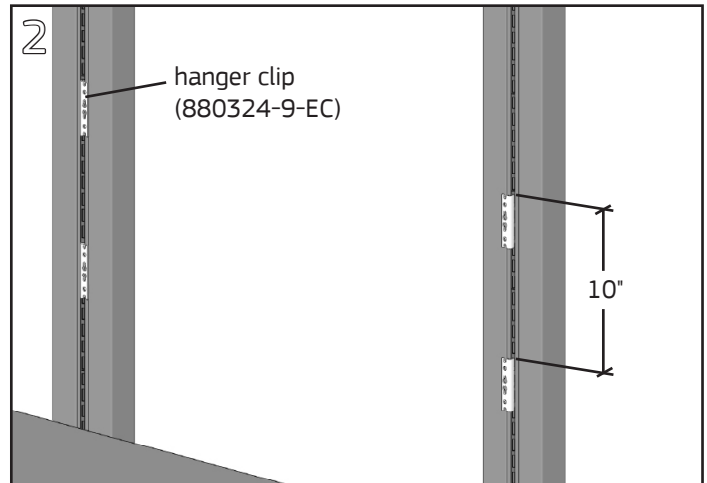

Install two hanger clips on the right side of the frame with a spacing of 10" between the tops of the clips. Repeat on the left side at the same heights.

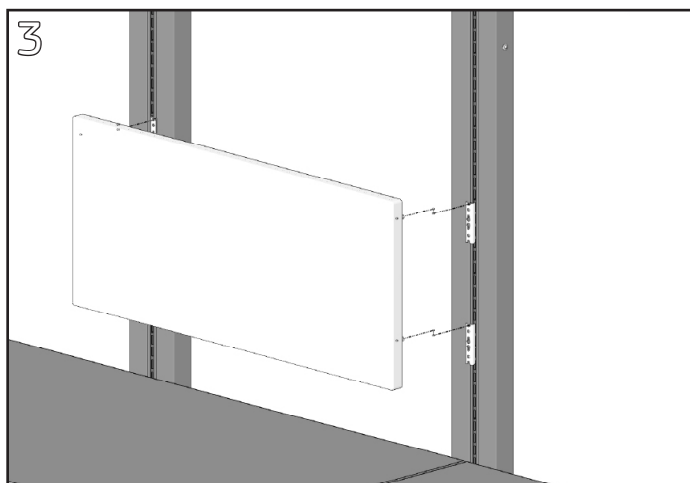

Align screws in back of the board with the notches in the tops of all four hanger clips. Slide the tackboard down over the clips to engage screw heads.