

## Surface Backstop


### Product Numbers

- BSXX

Hardware Pack: SFAHP (96011201)

### Required Tools

- #2 Phillips Screwdriver

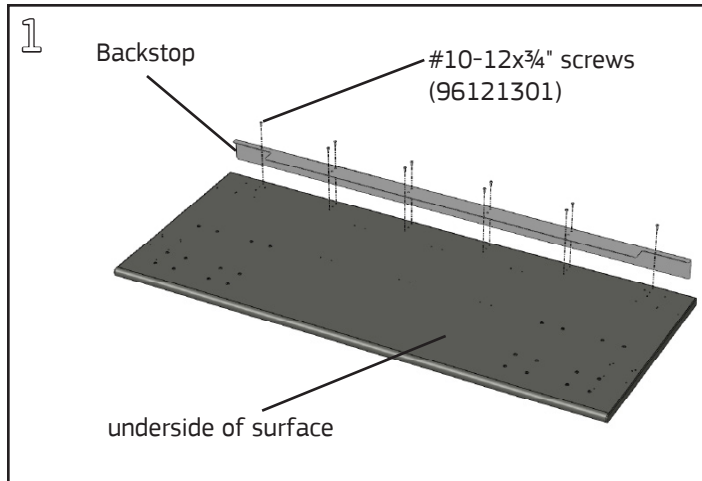

On underside back edge of surface, align the backstop with pre-drilled holes in surface as shown in the above image. Attach with #10-12x $\frac{3}{4}$ " screws provided. Tighten all screws securely with a #2 Phillips screwdriver.