High Density Shelf Lip

Product Numbers

- HDLxx

Hardware Pack: HDLHP (p/n 14061923-01)

Required Tools

- ⅜" Open End Wrench

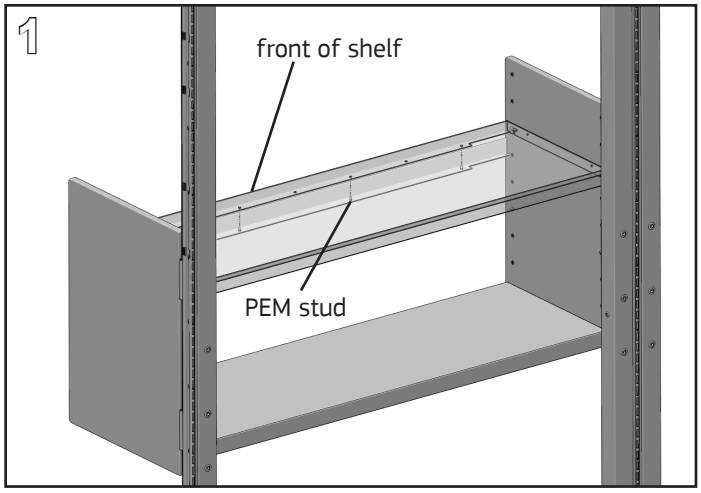

Align the PEM studs in the bottom flange of the High Density Shelf Lip with the holes in the bottom flange of a flat High Density Shelf.

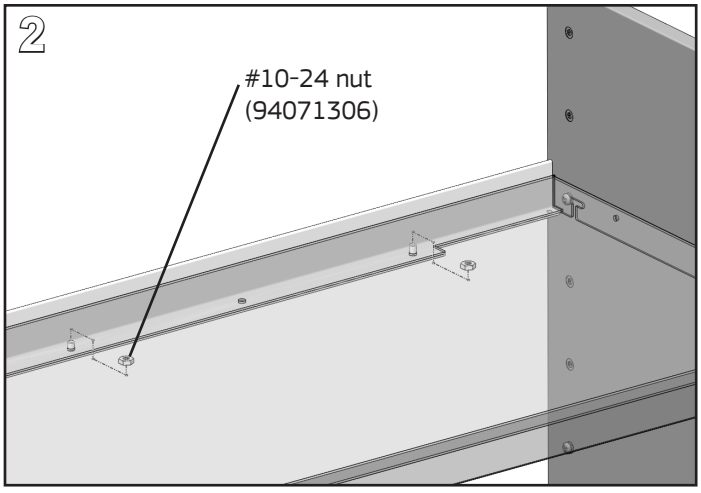

Fasten a #10-24 nut to each PEM stud and tighten securely with a **⅜" open end wrench.**