Tote Holder - Surface Mount

Product Numbers

- THSMxx

Hardware Pack

- THSM5HP (24062614-01)
- THSM7HP (24062624-01)

Required Tools

- #2 Phillips Screwdriver and/or #2 Phillips Bit
- Cordless Drill/Driver
- 3/8" Nut Driver or 3/8" wrench

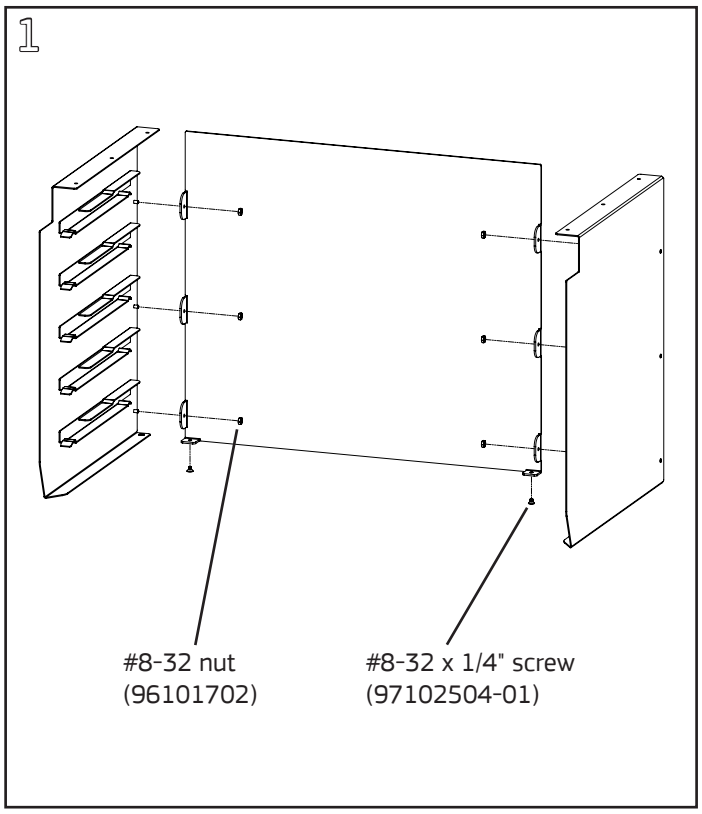

Step 1: Assemble left and right tote holder panels to tote holder back using (6, for 5-tier) or (8, for 7-tier) #8-32 nuts (96101702) threaded onto the #8-32 studs on each side panel and (2) #8-32 x 1/4" Phillips flat head screws (97102504-01) threaded into the PEM nuts on each side panel.

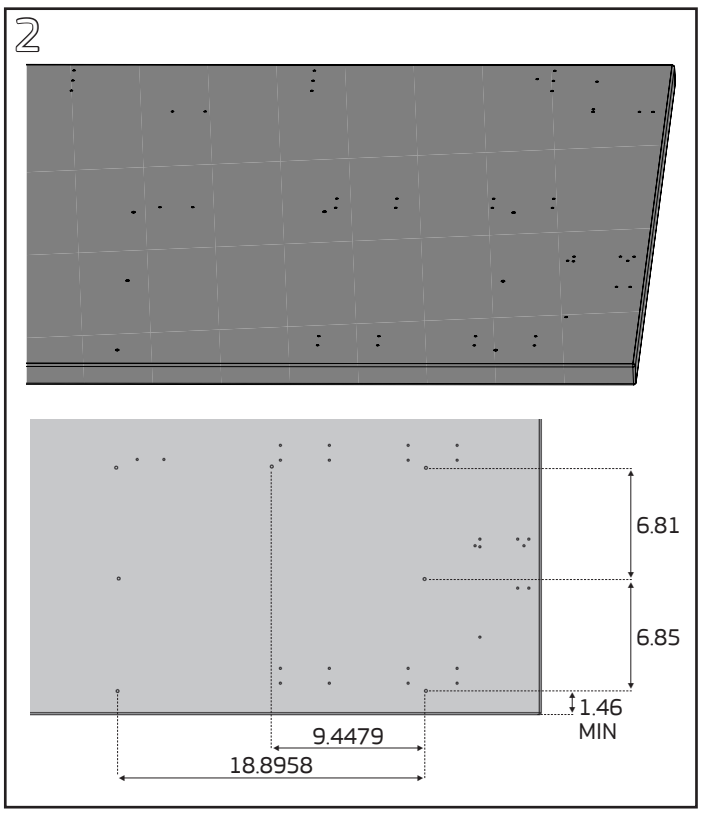

Step 2: Determine placement of Tote Holder along width of surface. If possible, it is easiest to remove the surface for this step and use the tote holder as a template. However, if this is not possible/convenient; mark and drill (7) 1/2" deep pilot holes in the surface per the dimensions shown using a 1/8" drill bit and cordless drill/driver.

Tote Holder - Surface Mount

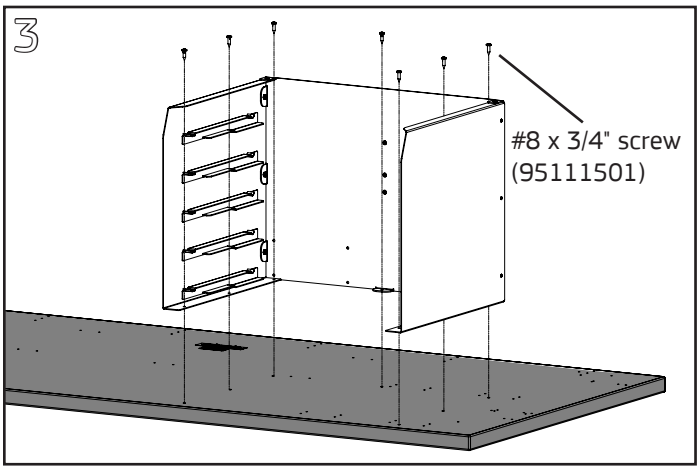

Step 3: Align the holes in top flanges of Tote Holder with the pilot holes in the surface. Attach with (6) #8 x 3/4" Phillips flat head screws (95111501) using a #2 Phillips driver. Again, this will be easier with the surface uninstalled but can be performed either way.

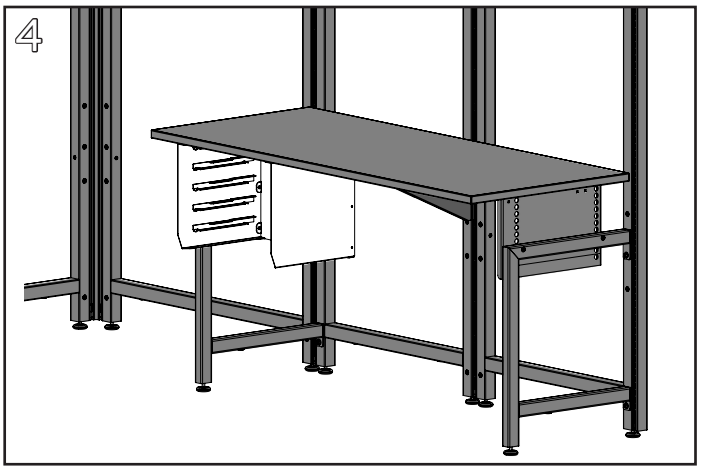

Step 4: If the surface was uninstalled for this assembly, reinstall using the instructions that came with the surface's support mounting accessories.