Surface Backstop

Product Numbers
- BSXX

Hardware Pack: SFAHP (96011201)

Required Tools
- #2 Phillips Screwdriver

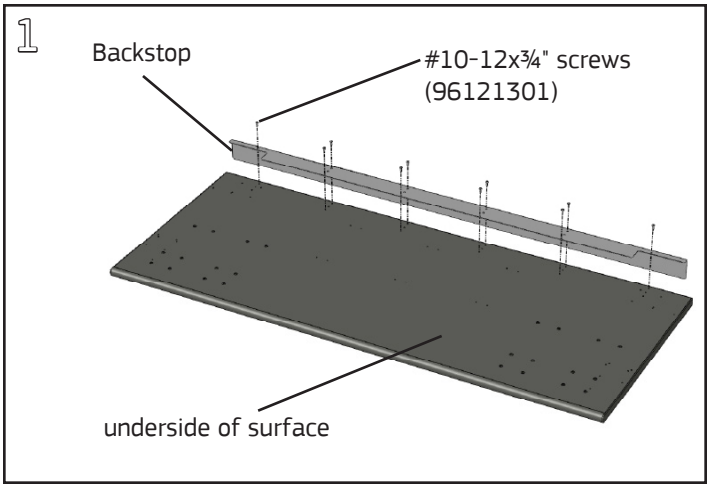

On underside back edge of surface, align the backstop with pre-drilled holes in surface as shown in the above image. Attach with #10-12x¾" screws provided. Tighten all screws securely with a **#2 Phillips screwdriver**.