Mobile Cart End Covers

Product Numbers
- MFCxx

Hardware Pack: MFCHP (p/n 93082704-01)

Required Tools
- 5/32" Allen Wrench

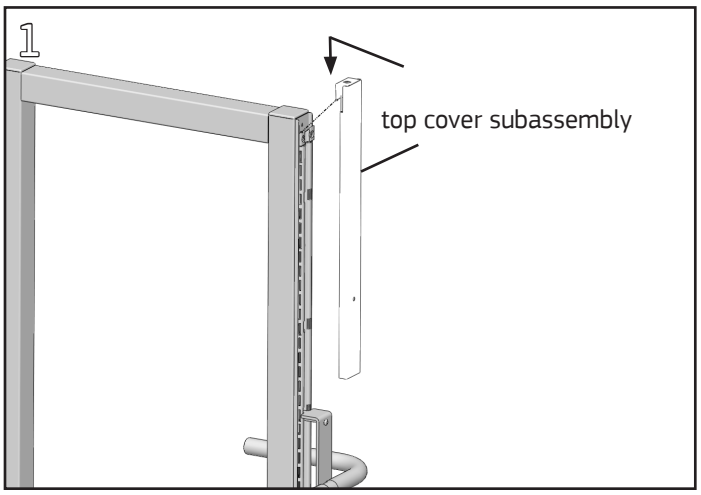

Hook top cover subassembly (shorter cover) over the top wedge block on the end of the Mobile Cart.

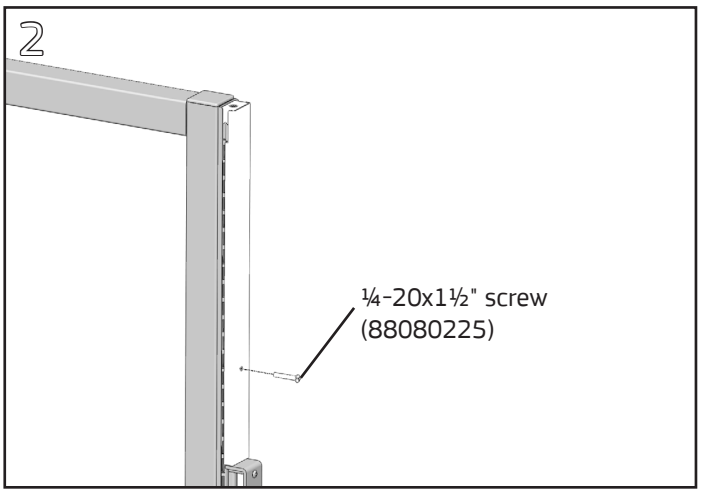

Fasten cover with a ¼-20x1½" socket button head cap screw using a 5/32" Allen wrench.

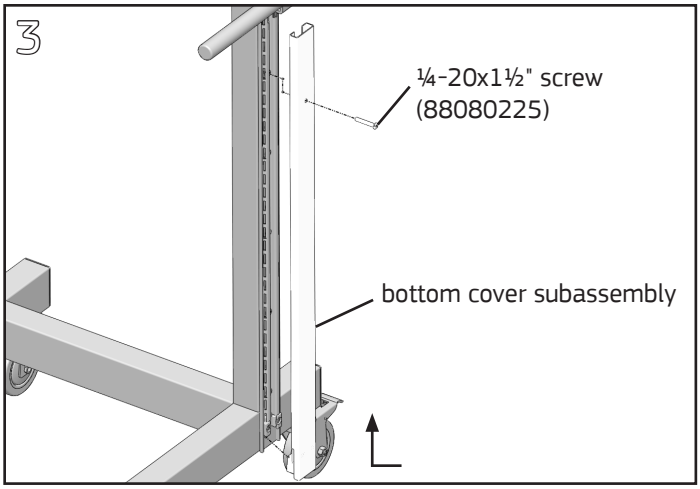

Hook bottom cover subassembly over the bottom wedge block and fasten (2) ¼-20 screws using a **5/32" Allen wrench**.

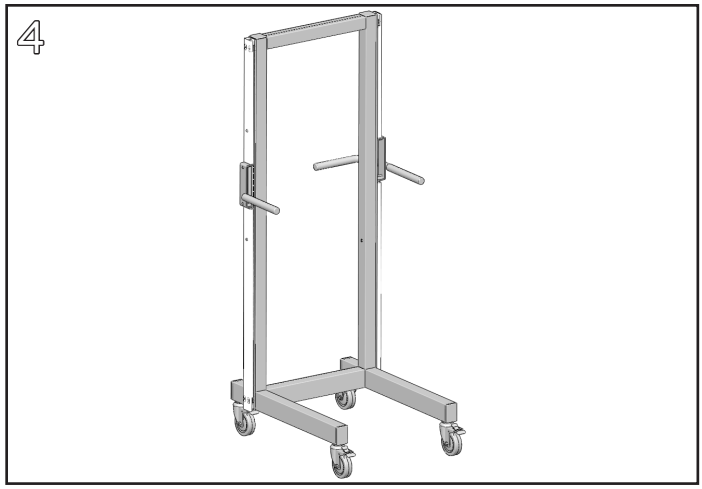

Repeat steps 1 through 3 on opposite side of the Mobile Cart.