Ground Chain

Product Numbers
- GCH6

Hardware Pack: none

Required Tools
- #2 Phillips Screwdriver

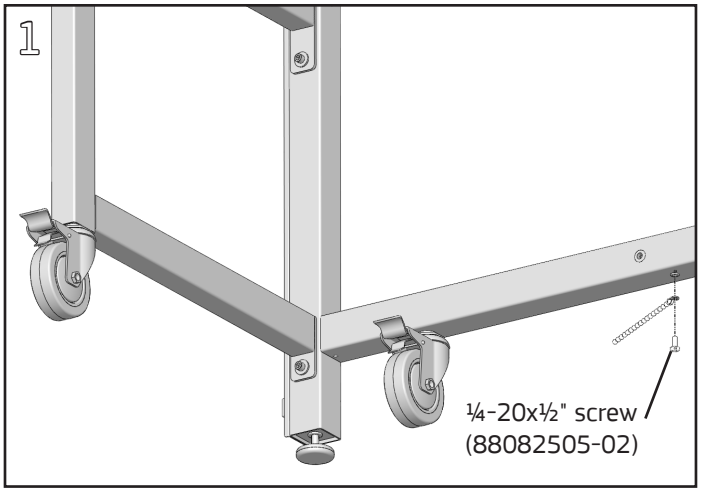

Locate the threaded insert or hole at the center underside of the bottom tube of the UltraFrame. Fasten ring terminal of Ground Chain to frame with a ¼-20x½" Phillips pan head screw using a **#2 Phillips screwdriver**.