

Roll-Out Shelf, Medium Duty

Product Numbers

- RSM2424
- RSM2430

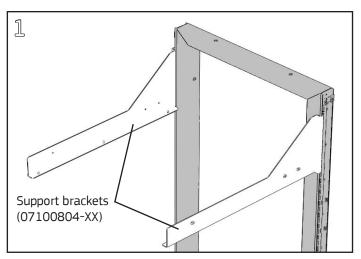

Install two support brackets at the same height, one on the left and one on the right of the front face of the frame.

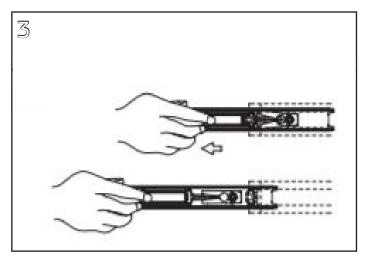


Remove outer slide from shelf. To remove slide, extend slide, pull black release tab, and pull inner and outer slides apart.


Required Tools

- 11/32 nut driver
- #2 Phillips Screwdriver

Hardware Pack: RSMHP (p/n 08022802-01)

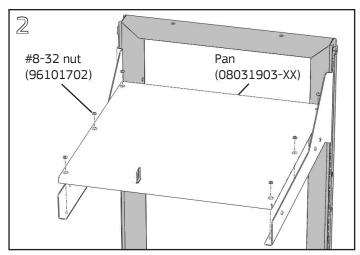


Place pan on support brackets aligning holes in pan with the threaded studs on the brackets. After pan is in place, start all (6) nuts by hand and tighten with 11/32 nut driver.

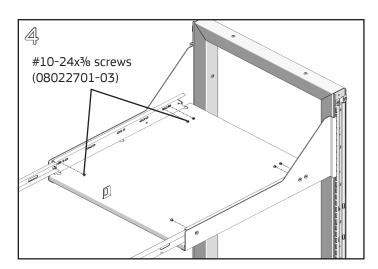

Fully extend outer shelf brackets. Align holes in slides with weldnuts on brackets. Insert #10-24x3/8 flathead screws (3 per side) using a #2 Phillips screwdriver. Completely tighten screws.

SYMBIOTE

Roll-Out Shelf, Medium Duty

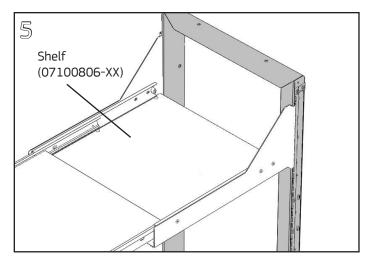

Lift rear of shelf over latch tab and align inner and outer slides. Push shelf back (toward frame) to engage slides.